

"Roofing work"


The important points for Safety and health

Disc grinder


(1) Three principles for handling of grindstones

Grindstones are substance which may break. Three principles for handling of grindstones "**Do not roll, do not drop, do not hit**" are important to handle grindstones.

Three principles for handling of grindstones

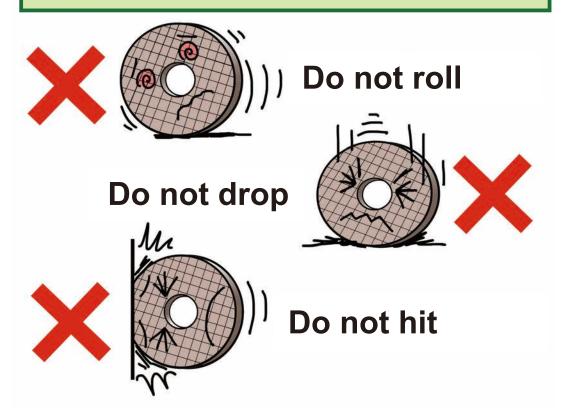

(2) The appearance inspection and the hammering test for grindstones

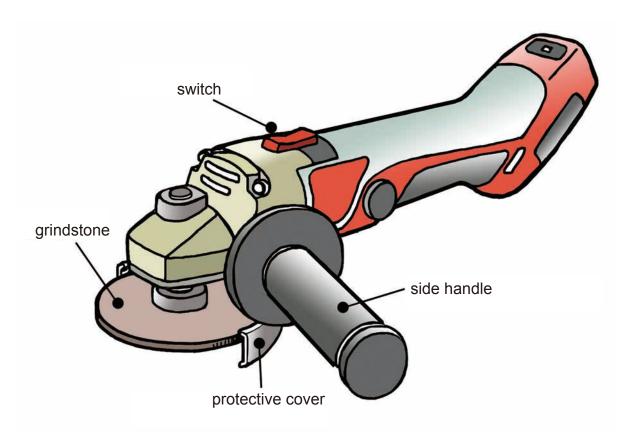

- 1. Carry out a visual inspection and a hammering test of the grindstone for cracks, chips, scratches, distortions, etc.
- 2. Attach a grindstone cover and use the disk grinder.
- 3. Let's firmly fix an object to be processed.
- 4. Keep your body, hands, fingers, feet, etc. out of direct contact with the rotating grindstone.
- 5. Do not remove a side handle.

(3) Trial run and the special education of grindstones



- 1. Replacement of grindstones and commissioning at the time of replacement are performed by a person who has received the safety and health special education.
- 2. Be sure to test run a grindstone.
 - i One minute or more before starting the work
 - ii Three minutes or more when grindstones were changed
- 3. Make sure that the "maximum allowable speed" and "dimensions" displayed on the grindstone match the machine.

(4) Wearing of personal protective equipment (eye protectors, dust respirator)



- 1. Let us use eye protectors.
- 2. For dusty work, use a dust respirator.
- 3. Wear ear protection devices such as earplugs when working in the noisy environment.



(5) Prevention of harms caused by the bursting of a grindstone



- 1. Use it according to the type and properties described in the label and the inspection table attached to the grindstone.
- 2. It is prohibited to use other than the surface specified for each grindstone shape.


(6) Prevent harms from contact, entanglement, electric shock, etc.



Wheel angle is within 30 degrees

- 1. Make sure that the grindstone is completely stopped before placing it on a table.
- 2. A grindstone should be used at the angle within 30 degrees to a horizontal plane.
- 3. When a grindstone is new, pull the disk grinder when grinding.
- 4. Thoroughly cover the electric related parts to prevent electric shock.
- 5. Be careful of water leakage from a grindstone.
- 6. Stop working when raining.

(7) Never remove a protective cover!

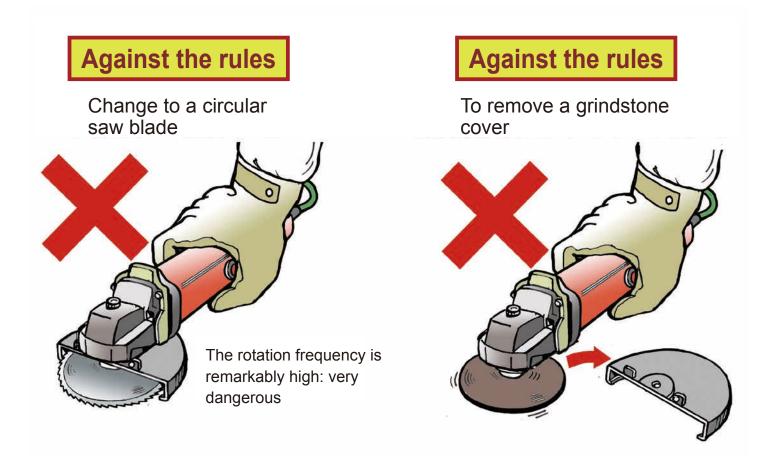

- 1. Do not attach a circular saw blade.
- 2. Never remove a grindstone cover.

(8) Replacement of a grindstone (unplug from the power supply)



- 1. Pull out a power plug when changing grindstones.
- 2. Let's use an accessory tool to attach and detach a grindstone.
- 3. Tighten a protective grindstone cover sufficiently.